


REMOVAL AND INSTALLATION

Exhaust Gas Recirculation Temperature (EGRT) Sensor — Outlet

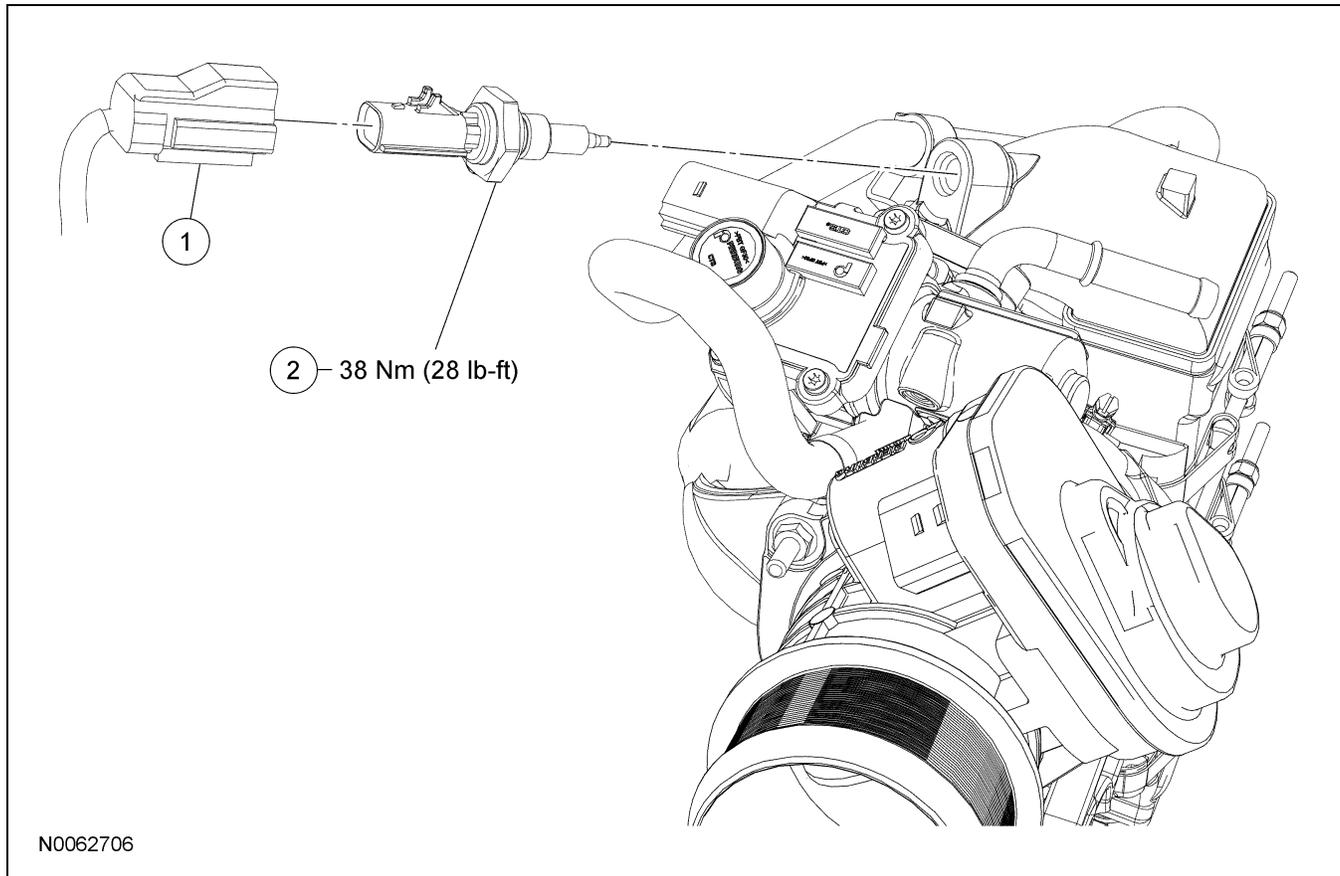

Item	Part Number	Description
1	14A464	Outlet exhaust gas recirculation temperature (EGRT) sensor electrical connector (part of 12B637)
2	12B591	Outlet EGRT sensor

2. Disconnect the outlet exhaust gas recirculation temperature (EGRT) sensor electrical connector.
3. Remove the outlet EGRT sensor.
 - To install, tighten to 38 Nm (28 lb-ft).
4. To install, reverse the removal procedure.

Removal and Installation

1.  **CAUTION:** Make sure the ignition switch is in the OFF position prior to working on the electronic engine controls or the vehicle may be damaged.

Turn the ignition switch to the OFF position.